AFRESCO WAL CANOPY RANGEHOOD

INSTALLATION AND USER'S MANUAL

CONTENT

INTRODUCTION	1
SAFETY INFORMATION	1
INSTALLATION / VENT OUTSIDE	2
INSTALLATION / RECIRCULATION MODE	6
OPERATION	7
MAINTENANCE	7
TROUBLESHOOTING	8
ENVIRONMENTAL PROTECTION	8

INTRODUCTION

Thank you for choosing this cooker hood.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance. In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

The cooker hood use high quality materials, and is made with a streamlined design. Equipped with large power electric motor and centrifugal fan, it also provides strong suction power, low noise operation, non-stick grease filter and easy assembly installation.

SAFETY INFORMATION

- Never let the children operate the appliance.
- The cooker hood is for home use only, not suitable for grill chicken, barbecue, roast etc shop and other commercial purpose.
- The cooker hood and its filter should be clean regularly in order to keep in good working condition.
- Clean the cooker hood according to the instruction manual and keep the unit from danger of burning.
- Forbid the direct baking from the gas cooker.
- Please keep the kitchen room a good convection.
- Before connecting this appliance check that the power supply cord is not damaged. A damage supply cord must be replaced by qualified service personnel only.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels;
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels;
- Regulations concerning the discharge of air have to be fulfilled.
- This appliance if not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person slide for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not flambé under the range hood.
- The range hood is not intended to be installed over a hob having more than four hob elements

Electrical Shock Hazard

- Only plug this unit into a properly earthed outlet. If in doubt seek advice from a suitably qualified professional.
- Failure to follow these instructions can result in death, fire, or electrical shock.

INSTALLATION /VENT OUTSIDE

Prepare for installation:

If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminum, flexible pipe or inflammable material with an interior diameter of 150mm)

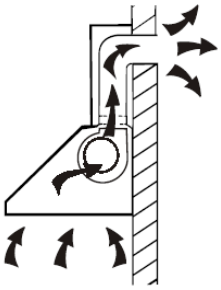

Before installation, turn the unit off and unplug it from the outlet.

The cooker hood should be placed at a distance of 65~75cm above the cooking plane for best effect.

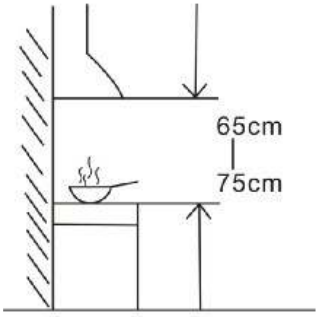

Installation:

1. Drill 3 x 8mm holes to accommodate the bracket. Screw and tighten the bracket onto the wall with the screws provided.

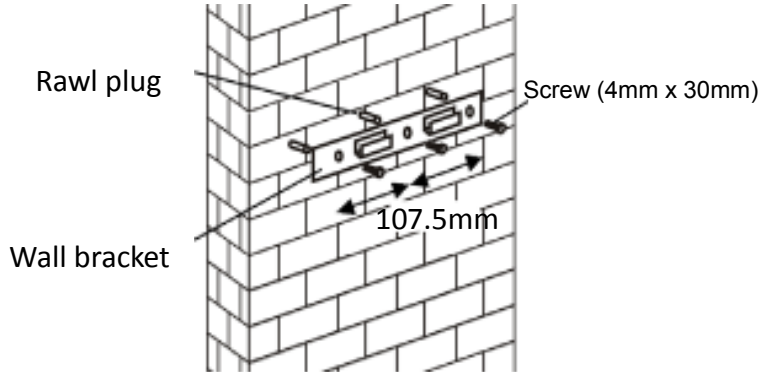

2. Leave up the cooker hood and hang onto the wall bracket hook.

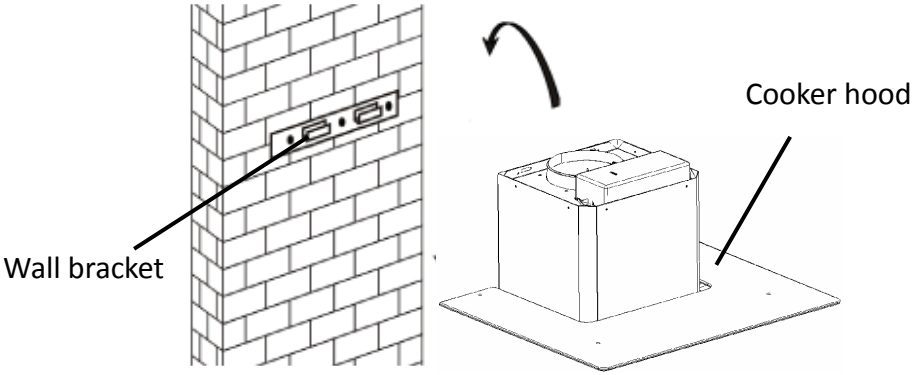

3. Fix the one-way-valve to the air outlet of the cooker hood. Then, attached the exhaust pipe onto the one-way-valve as shown below.

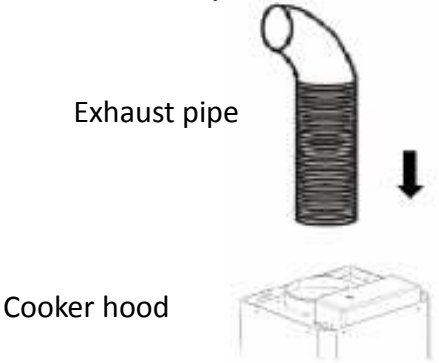

4. Chimney installation

For glass model and T shape model

i. By Put the upper chimney into lower chimney .Then pulling out the upper chimney upwards. Adjust to reach the height required.

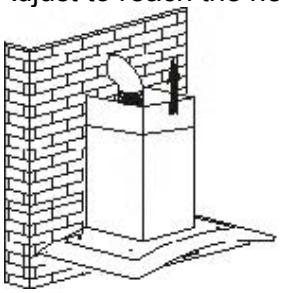

ii. Sliding the chimney to adjust the chimney height. When the height you required is reached, then hang the fixing hole to the fixing screws as showed in below pictures.

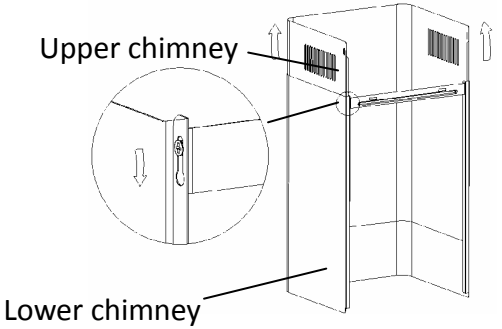

iii. Drill 2 x 8mm holes to accommodate the plate II. Screw and tighten the plate II onto the wall with 2 screws provided.
Assembly the chimney onto the unit and fix it with 2 screws.

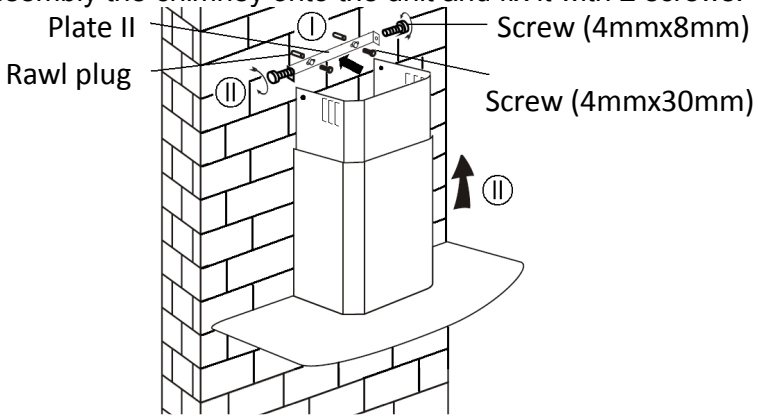

For Tower model

i. By Put the inner chimney into upper chimney .Then pulling out the upper chimney upwards. Adjust to reach the height required.

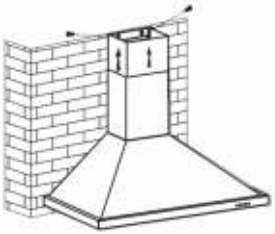

ii. Fix the lower chimney with 2 pcs of 4x8mm screws.

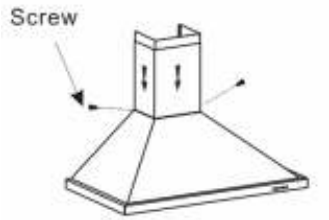

iii. Sliding the chimney to adjust the chimney height. When the height you required is reached, then fix 2 pcs of 4x8mm screws onto the hole fixing with plate I as showed in below pictures.

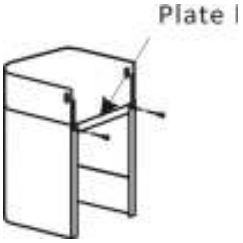

iv. Drill 2 x 8mm holes to accommodate the plate II. Screw and tighten the plate II onto the wall with 2 screws provided.
Assembly the chimney onto the unit and fix it with 2 screws.

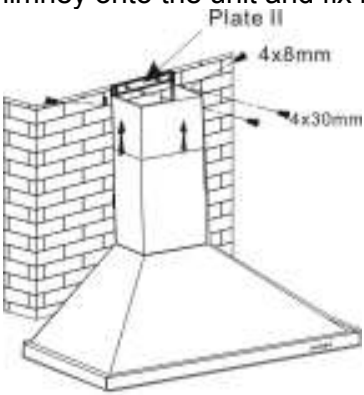

INSTALLATION / RECIRCULATION MODE

If you do not have an outlet to the outside, exhaust pipe is not required and the installation is similar to the one show in section "INSTALLATION (VENT OUTSIDE)".

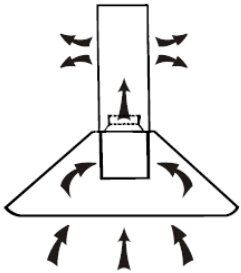

Activated carbon filter can be used to trap odors.
In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.

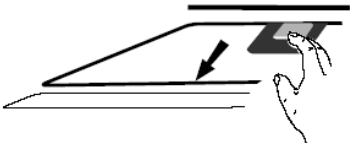

Plug the activated carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side.

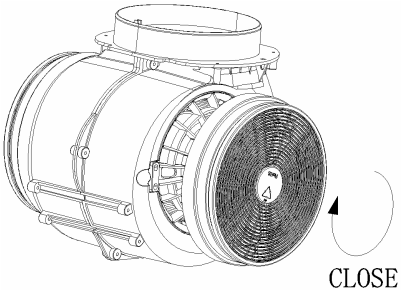

NOTE:

- *Make sure the filter is securely locked. Otherwise, it would loosen and cause dangerous.*
- *When activated carbon filter attached, the suction power will be lower.*

OPERATION

Push button/Electronic Control

Fan Turn Off button 0

Fan Low Speed button
Fan Medium Speed button
Fan High Speed button

Fan can be run at three different speeds, depending on the cooking requirements and is controlled in accordance with the graphics above

Light button

MAINTENANCE

Before cleaning switch the unit off and disconnect from the power supply.

Regular Cleaning
Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.

Monthly Cleaning for Grease Filter
ESSENTIAL: Clean the filter every month can prevent any risk of fire.
The filter collects grease, smoke and dust, so the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent.

OPTIONAL /IF INSTALLED. Annual Cleaning for Activated Carbon Filter
Apply SOLELY to unit that installed as a recirculation unit (not vented to the outside). This filter traps odours and must be replaced at least once a year depending on how frequent the cooker hood used.

REPLACEMENT OF LAMPS

To replace a lamp, first disconnect the rangehood from the power supply.
Find where the bulb located in the lamp body. Remove the cover and old bulb, insert the replacement lamp into the lamp holder, replace the lens and lamp cover.
Change the halogen lights with similar fittings and power max, 20W.

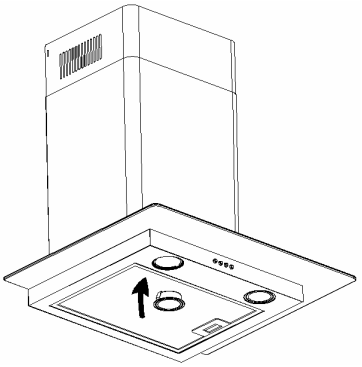

(Fig.3: 20W Max)

TROUBLESHOOTING

Fault	Cause	Solution
Light on, but fan does not work	The fan blade is jammed.	Switch of the unit and repair by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	Halogen light bulb burn.	Replace the bulb with correct rating.
	Power supply looses.	Plug in to the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch of the unit and repair by qualified service personnel only.
	The fan motor is not fixed tightly.	Switch of the unit and repair by qualified service personnel only.
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in proper location.
Suction performance not good	Too long distance between the unit and the cooking plane	Readjust the distance to 65-75cm

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.